BODY


Removal, Installation and Adjustment of Doors

COURTESY LAMP SWITCH STOPPER ATP32 79 40 25×2 5


Usage

When the door has been left in an open state, press the Courtesy switch to shut off the cabin's lamp and to stop the "open door alarm" from sounding.


- Simply grasp the lever to apply or remove.
- As the switch has been made out of engineering plastic with glass fiber, it is both robust and light.
- The switch's rubber does not scratch.

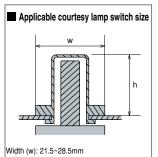


Height (h): Over 10mm when switch is OFF

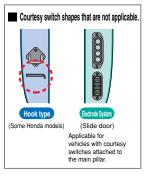



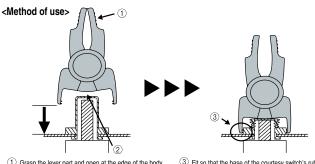

 - Grasp the lever part and open at the edge of the body.
- (2) Push vertically towards the courtesy switch push.
- 3 Fit so that the base of the courtesy switch's rubber cover catches the body's edge.
 - 4 Make sure of secure installation.



DOOR HINGE BOLT WRENCH SET (2pcs.)

NO. DIVIZZ		▼ g 450	⊕ 10			
Door Hinge Bolt Wrench		12, 14				
No.	S	D	L	▼g	4	
DM7-12	12	10	300	200	10	

No.	S	D	L	▼g	#	
DMZ-12	12	19	300	200	10	
-14	14	22	300	250	10	
		•				

Purpose

Special wrench for adjusting, removing and installing doors.

- Can be used in narrow quarters where conventional wrenches cannot be used.
- Combination of 12×12(14×14) enables using right side and left side effectively.

S	Applicable car Maker
12	Toyota, Nissan, Mitsubishi, Honda, Mazda, Subaru, Daihatsu
14	Toyota, Daihatsu, Mitsubishi

DOOR HINGE BOLT Removal, Installation and **WRENCH SET** Adjustment of Doors DOOR HINGE BOLT

DOOR HINGE BOLT RATCHET WRENCH

DOGIT IIII GE DOET TIATOTIET WILENOTT							
No.	S	L	▼g	8			
DMR-12	12	250	250	10			

- · Ratchet end for effective use in narrow spaces.
- Can be used from upper and lower sides of a hinge and left & right door. "S" shaped body for bypassing obstacles.
- Extruded shape of socket enables use on concave press-hinges, bypassing other bolts.
 12 points ratchet end allows easy fitting into hinge bolts.



RATCHET WRENCH

●TORX® WRENCH

●TORX® DRIVER

OTHER TOOLS

Adjustment of Door Striker