 
 


2 Disassembling/Installing drum brake

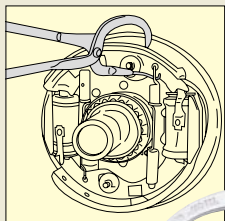

● BRAKE SPRING PLIERS & CLAW

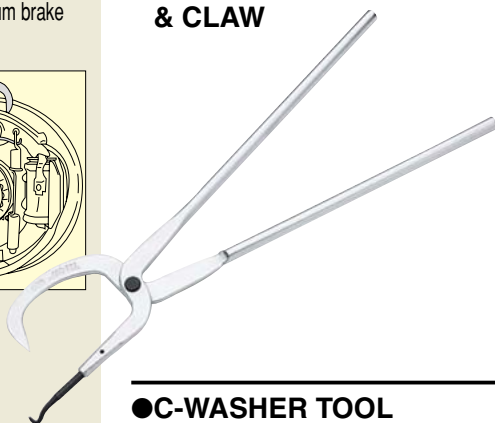

BRAKE SPRING PLIERS [Claw (with a pin)]

No.	L			
ASP-550	550	1,200	1	


Claw with a pin

No.	L			
ASP-C	101	35	1	



Purpose

- Special tool for removing / setting of large sized vehicle (4-10 tons).

 *Do not use this claw with BSP-520 (conventional type).



● C-WASHER TOOL

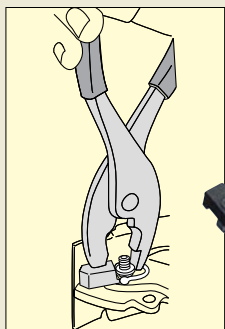  

C-WASHER TOOL

No.	L			
ABX-31	203	230	10	

Good work efficiency with special claws.

Purpose

- Removing/installing C-washer.

Features

- For quick work, use wedge side of claw to open C-washer flat side to push it out.

[Removing C-washer]


1. Set wedge side of claw to inside.	2. Open C-washer with blade part.	3. Turn claw and set flat side to inside for removal.

② Cleaning Brake Shoe Bracket of Large Vehicles


● BRACKET SANDER SET



 Supplement paper



Rubber wheel

 

BRACKET SANDER SET

No.	Contents						Car Models			
	Paper			Rubber Wheel						
	D ₁	ℓ	No.	Pcs.	D ₂	L	Qty.			
APS306	30	25	#60	5	29	177	1	Hino over 8t	160	5
APS326	32	30	#60	5	31	177	1	UD over 8t	160	5
APS356	35	35	#60	5	34	177	1	Fuso, Isuzu over 8t	160	5

SPARE PAPER SET FOR BRACKET SANDER

No.	Contents	Quantity		
APS3010	#60 Paper for φ30	10pcs.	100	5
APS3210	#60 Paper for φ32	10pcs.	100	5
APS3510	#60 Paper for φ35	10pcs.	100	5

Purpose

- Cleaning brake shoe bracket of large vehicles.

Rubber wheel for bracket sander

No.	D ₂	L		
APS-30G	29	177	110	10
APS-32G	31	177	110	10
APS-35G	34	177	110	10