
பி AUTOMOTIVE SPECIAL TOOLS

Removing lock nut

STEERING SYSTEM

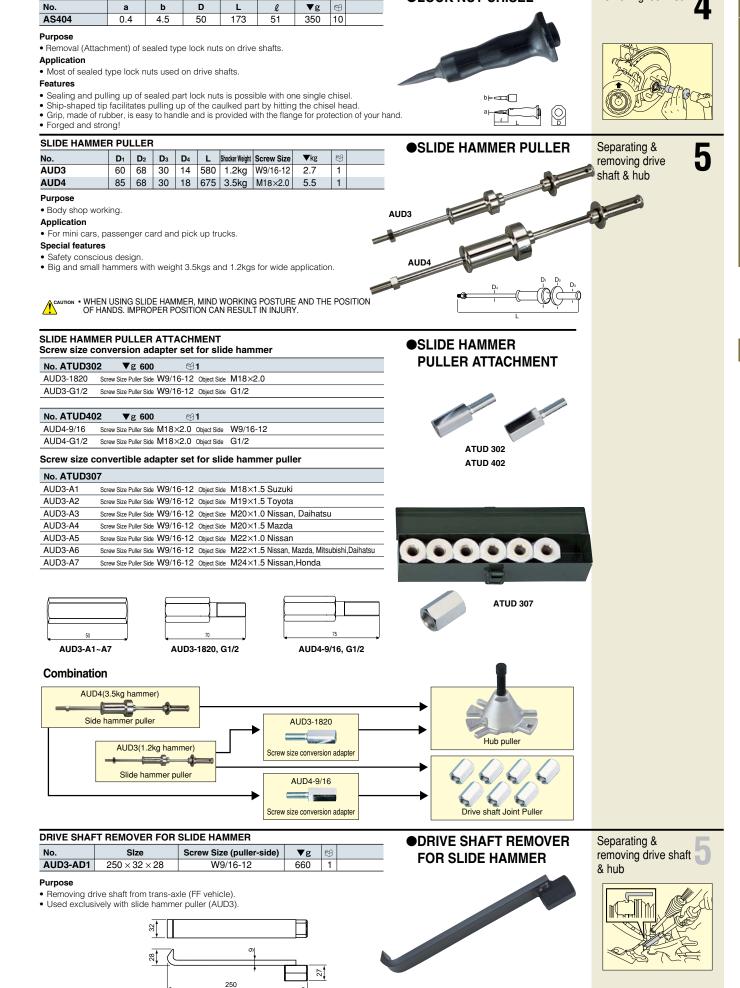

1.Removing wheel-2.Removing tie rod-3.Removing pitman arm-4.Removing lock nut-5.Separating & removing drive shaft & hub-6.Disassembling/Installing drive shaft band-7. The attaching of the drive shaft to the chassis-8.Attaching the wheel

OCK NUT CHISEL

LOCK NUT CHISEL